

CABLE TELEVISION SUBSCRIBERS

Putting Parental Control on a Motorola Set Top Box

Be sure to use the four ARROW keys that surround the OK button.

1. Press the MENU button on your remote.
2. Press the right or left arrow key on your remote until the LOCK icon is highlighted and press OK
3. You will be asked to enter a four digit PIN. This should be four numbers that you can remember or write them down where you can find them. Your set top will not play any programming that has Parental Lock without entering these numbers. Enter four numbers and then enter the same four numbers to verify and press OK.
4. You will now see a list of ways to apply Parental Locks. It is recommended that you use MOVIE RATING LOCKS and HIDE TITLES. Select MOVIE RATING LOCKS first and press OK.
5. You will see a list of movie ratings from G to Adult. Use the arrow keys on your remote and highlight your selection and press OK on your remote. Press LAST on your remote to go back one screen to make more changes.
6. Use your arrow keys on your remote to highlight HIDE TITLES and press OK. Highlight the titles you do not want to show up and press OK. Press the EXIT button on your remote to go back to your TV programming.

Note

A LOCK symbol will appear to the right of each rating in the guide that will require the PIN number to view.

To Watch Programming While Parental Controls Are On

1. Tune to the channel you want to watch.
2. If the program is restricted by parental controls, a pop up box will appear on the screen requesting your PIN.
3. Enter your 4 digit PIN. (Created in Step 3 above).
4. If you entered your PIN correctly, the programming you requested will appear.